

TextAlert-X Premium GSM/Sms Alarm Panel

DETAILED intruder warnings,
SIMULTANEOUSLY sent to all who Need-To-
Know, can PREVENT Ambush,
tragedy & ensure criminals get
caught in the act.



In the IDEAL world, an old-fashioned siren alarm is fine - the alarm triggers & armed response warns the primary contact; who must then manually warn all others who need-to-know... But, why not automate it? Have your alarm panel simultaneously give everyone a call & sms warning. It's so affordable, it would be criminal not to do it.



Wireless & GSM Simplicity

TextAlert-X offers both wireless & wired sensor covering up to 81 locations. Then, use any prepay or contract sim-card from any service provider. Of course, TextAlert-X triggers to armed response, activates sirens & floodlights too.

Event Log

TextAlert-X maintains a log of the past 85 alarm events.

Built-In Backup Battery

Forget bulky external UPS battery backups - TextAlert-X has it built in - & it warns you anywhere in the world via SMS of power failures or low battery condition.

Remote & GSM System Management

Set or check alarm status via cell phone, via onboard keypad, or via remote.

CALL: 0861-WIRELESS / +27 (0)21 438 8324

info@WirelessAlert.co.za

9 Van Kamp st., Cape Town, 8005, South Africa

TextAlert-X GSM/Sms Alarm Panel

Blue Backlit LCD Display for Panel status and facilitates configuration).

Keypad Allows configuration & control of panel

Event Log Via LCD (85 events) includes; arming, disarming, alarming events (with time and date stamps)

12 second phone voice message Plays when alarming & when call recipient answers phone

Chime Function When disarmed zone triggers

Watchdog Zone Function; use to monitor sick/old persons; requires sensor to be triggered within time-frame or alarm sounds

Sensor Low-Battery Displays on LCD (by zone) with warning beep

Wireless Zones 8 wireless zones each support 9 sensors (72 monitored locations)

9 Wireless Panic Buttons 9 remote can tune in to send panic sms & siren, etc.

Wired Inputs 7 wired zone-terminals provided

Auto-Arm/Disarm Zones – 6 time settings per 24 hours

Test-Mode HeartBeat Panel checks if a particular Wireless sensor has been linked with the Panel or not. Sensor and zone number will display on LCD if sensor has been linked.

Listen-in & speak functions during alarming

Arm/Disarm chirp Panel can be set to sound the siren when arming and disarming Panel.



SPECIFICATIONS

Dimensions: (203mm) x (143mm) x (35mm)

Operating temperature: 0°C to 54°C

Power consumption: 600mW

Battery Backup: Nickel Metal Hydride Internal backup battery (12 hours backup).

Power Supply Input: 12 V DC (from 230V mains transformer)

RF Transceiver: ISM frequency (433MHz)

GSM Transceiver: Tri Band (Southern Africa)

WIRELESSALERT[™]

www.WirelessAlert.co.za

CALL: 0861-WIRELESS / +27 (0)21 438 8324

info@WirelessAlert.co.za

9 Van Kamp st., Cape Town, 8005, South Africa

All information: copyrighted © and trademarked™ Infocus Trading 111,cc 2011